


# RETORT-CHECKS Selection Chart

## For Steam Pressure Cooking

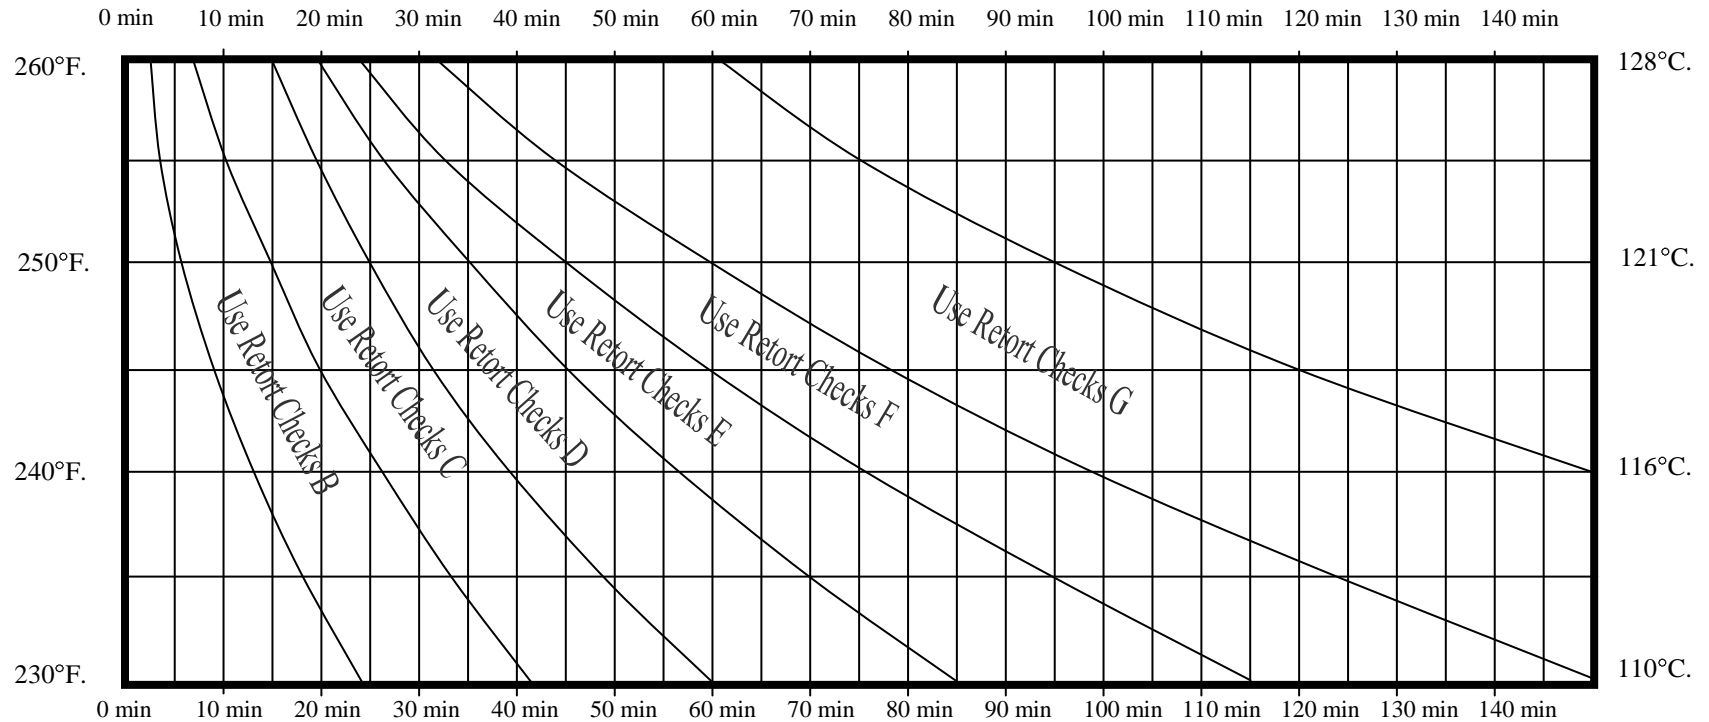

### HOW TO SELECT THE CORRECT INDICATOR FOR YOUR COOKING PROCESS

Find the time/temperature position of your cook on the graph above. Use the Retort-Checks as described in the areas between the performance curves. If your cook falls directly on a performance curve, use the indicator designated to the left.

The performance of Retort-Checks indicators is represented by the seven curved lines shown above. Each Retort-Checks will complete its color change to green just prior to the time/temperature labeled for its use. For example, Retort-Checks G will turn color to green at approximately 60 minutes at 250°F. It should be used for cooking times between 60 minutes and 95 minutes at 250°F. or any of the other time/temperature combinations shown in the area marked, "Use Retort-Checks G".

